

# PPF/PCC Instructions rev 5/08

## APPLICATION

Your Phasor Pain field System is capable of operating in two modes. Mode 1 is at a frequency that is known to produce paranoia, nausea, disorientation and many other physiological effects. Mode 2 allows using the system as an audible alarm to frighten off intruders or warn the user of an intrusion. Both modes may be used in combination and are easily controlled from the front panel by the user.

### *A WORD OF CAUTION:*

Ultrasonic is a gray area in many respects when application involves the control of animals or even as a human deterrent to unauthorized intrusion. It is always best to consult with local municipal and state laws before using this device to protect home or property. REMEMBER MANY STATE LAWS LEAN MORE TOWARDS THE RIGHT OF THE CRIMINAL RATHER THAN THE VICTIM

## INSTRUCTIONS

1. Position unit so as to direct toward target area. Unit will lose all directionality if operated inside of a small volume room. This is due to energy being reflected, refracted etc., throughout the room.
2. Determine power requirements - "Internal" alkaline batteries will provide above 6 hrs. of use, but cannot be recharged. Ni-Cads will provide about 2-1/2 to 3 hours but can be recharged. The "External" supply can be a 12 VDC 1.5 amp reasonably regulated wall adapter etc.
3. Set switch on rear panel to desired position of "Internal" battery on "External" 12 VDC supply.
4. Adjust controls for maximized effect to target subject - experiment for optimum results.
  - A. Sweep control contains on/off switch to disable as well as adjusting the sweep rate.
  - B. Frequency control contains on/off switch for main power and adjusts frequency of operation.
  - C. Low range control allows use as an audible alarm and verifies operation
  - D. Remote jack is intended for interfacing to a remote detector such as our **canine bark controller** or intrusion detection system

There have been numerous requests for information on the effect of these devices on people. First, let me make it clear that no device such as this should purposely be used on humans and we discourage this use due to the possibility of acoustically sensitive people being highly irritated.

None of these devices have the ability to stop a person with the same effect as a gun, club or more conventional weapon. They will, however, produce an extremely uncomfortable irritating and painful effect in most people. Not everyone will experience this effect to the same degree. Unfortunately younger women are much more affected than older men due to being more acoustically sensitive. The range of the devices depends on many variables and is normally somewhere between 10 feet and 100 feet

One possible use of the device (that deserves careful consideration) is the installing of all transducers, directed to an area desired protected against unauthorized intrusion. This produces an irritating and painful feeling to the intruder along with a condition of paranoia of not knowing what to expect next

## ATTENTION!!

Your sonic acoustical generator is intended used as a security or property protection device. Please be aware that certain states do not allow the use of any device that may discourage or impede any criminal activity claiming such use is a violation of the law-breakers civil rights. Always check with the proper authorities before installing this device with the intent of discouraging illegal entry or protection of your personal home or property.

We have been alerted that use in MASS, NYC, and WASH DC may require licensing restrictions when used for security or property protection involving a possible violation of the law breakers rights!

We have provided the finished device without labeling or control identification for the users protection should he run into any of these **stupid regulations**. The user may choose to do his labeling using the instructions and a suitable marking pen.

# PPF/PCC Instructions

## CONTROLS

**FREQ POWER/ON/OFF** - \*Click on and rotate for desired frequency. Adjusts frequency from 10 to 25 Khz. May require experimenting for best results. Make note of shaft setting for specific targets



**SWEEP /ON/OFF** -Click on to enable sweep and rotate to desired rate. Changes from a slow increasing rate to a chirping effect.

**LOW RANGE**-Switch lowers output frequency to audible range.

**BATTERY/EXT POWER SWITCH** -Selects internal batteries or external wall adapter with correct mating plug. *UP* position is batteries, *DOWN* is external 12 volts.

**12 VOLT IN POWER JACK** -Connect to mating plug of 12VDC/1.5A Wall adapter.

**REMOTE CONTROL JACK** - Must be shorted with the included shorting plug for normal manual operation. This jack is retrofitted to our **cannine bark controller** or other auto control devices

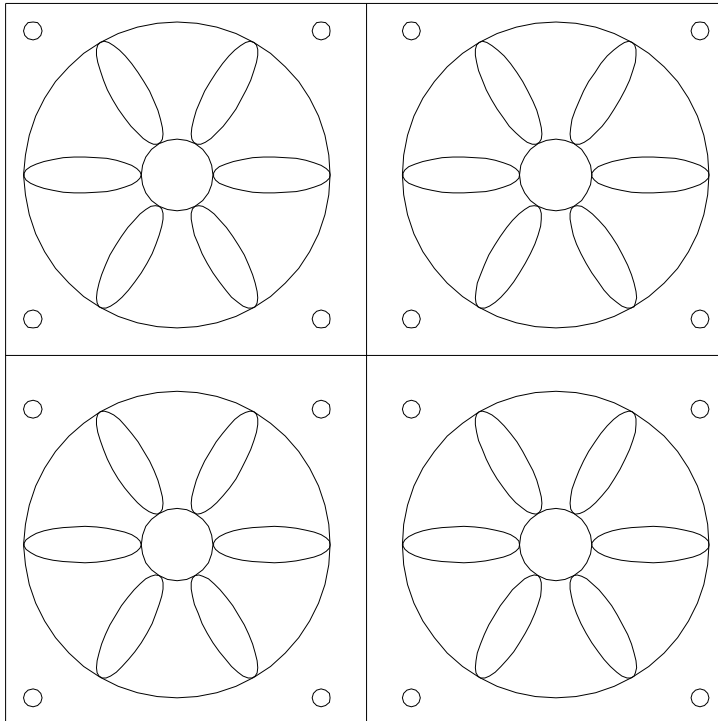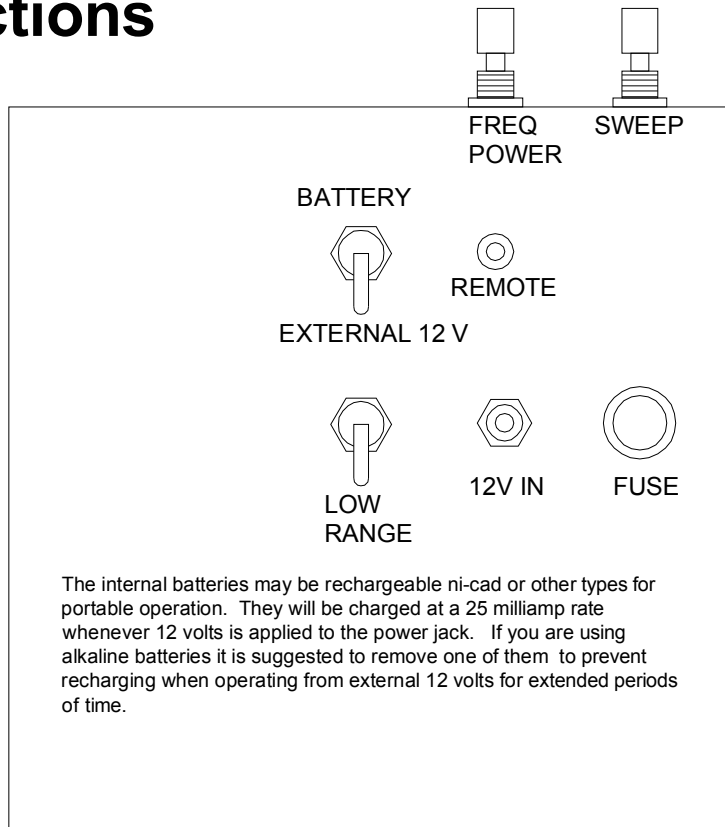

## INSTRUCTIONS

1. For portable operation it will be necessary to undo plastic cover from metal enclosure via screws. Determine batteries and insert into holders observing polarity.
2. For 115 vac operation insert plug from wall adapter. Unit may also be powered from a vehicle. Do not reverse polarity when connecting into vehicle 12 volt system.
3. Test above control settings and verify proper functioning.

Information Unlimited PO Box 716  
 Amherst N.H. 03031 U.S.A.  
 Web<[www.amazing1.com](http://www.amazing1.com)>  
 E-mail<[riannini@metro2000.net](mailto:riannini@metro2000.net)>  
 603 673 4730 Fax 603 672 5406